


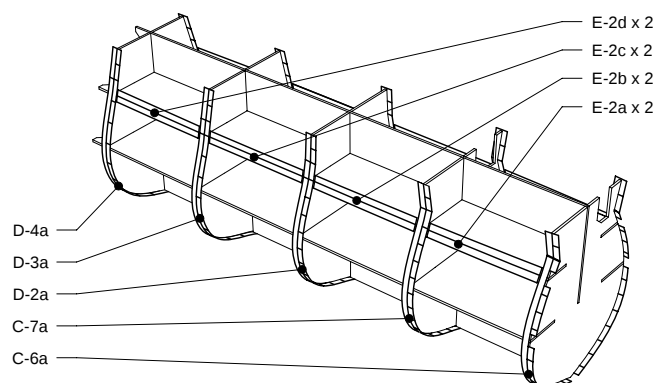
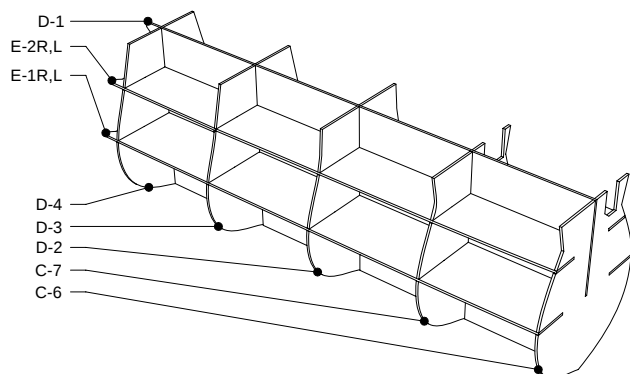
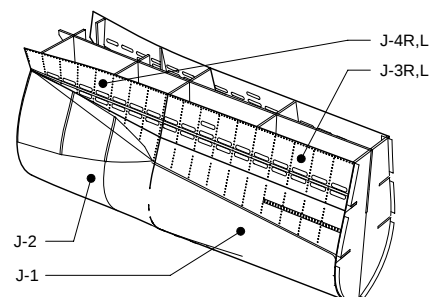
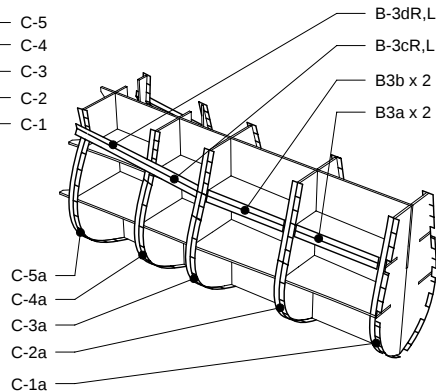
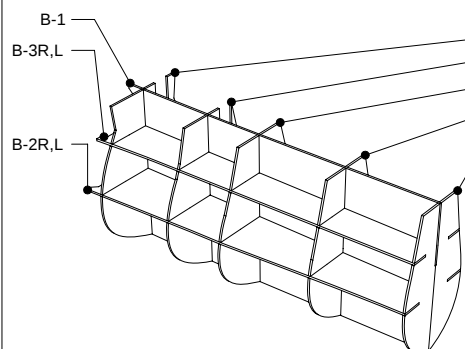
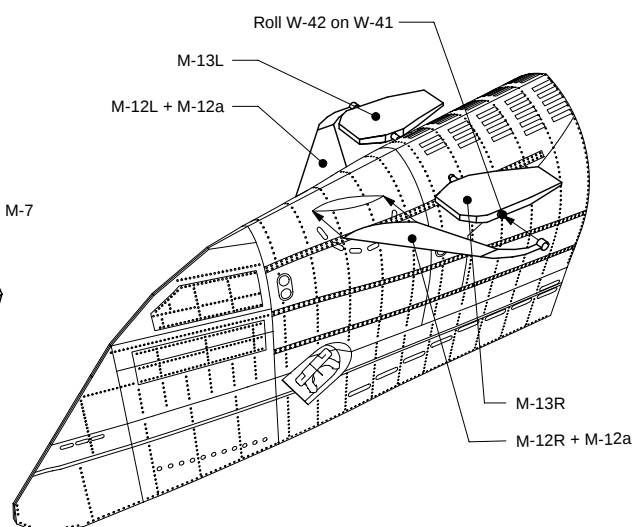
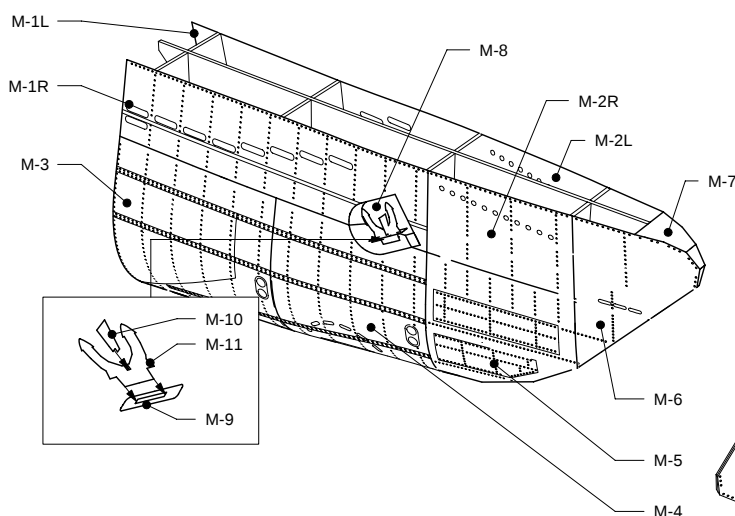
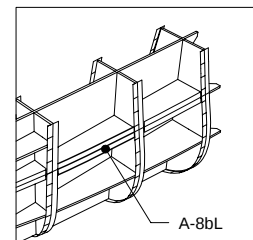
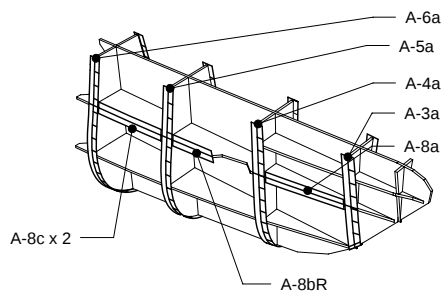
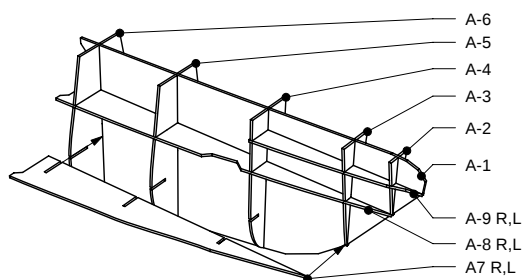
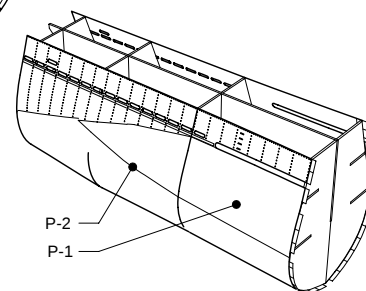
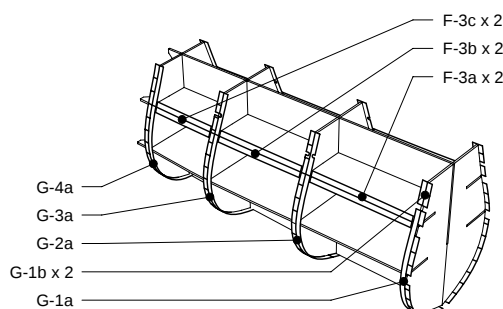






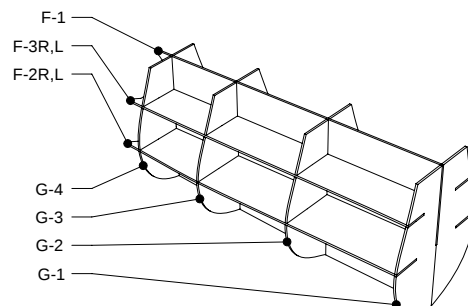












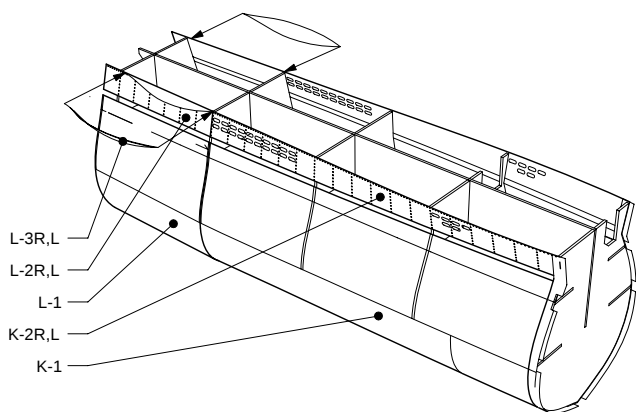









Section-4
Section-3
Section-2
Section-1

Caution! note the offset position of the join on H12-13 & H14-15

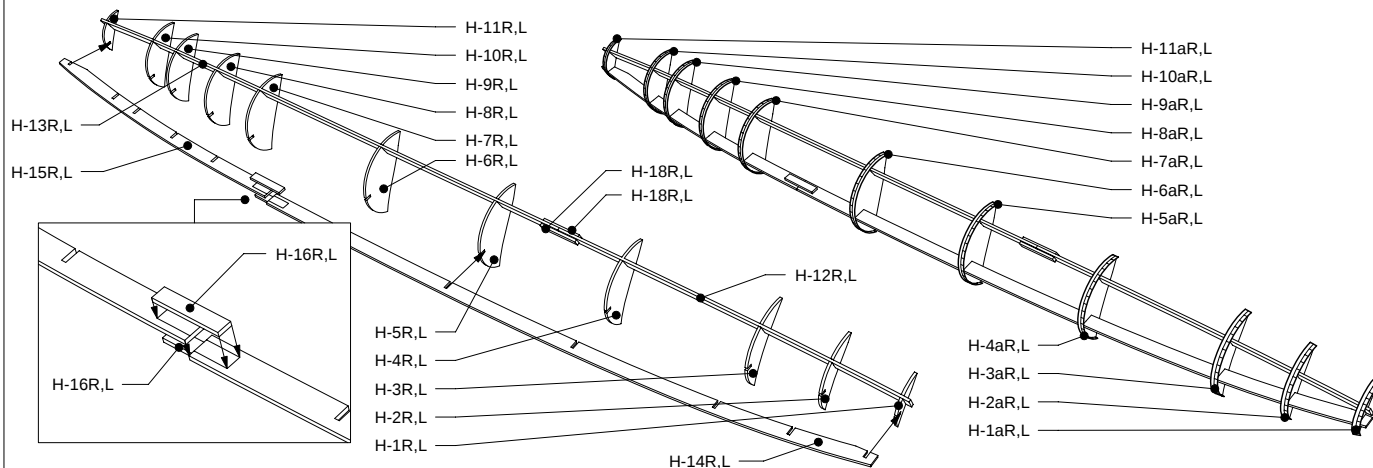


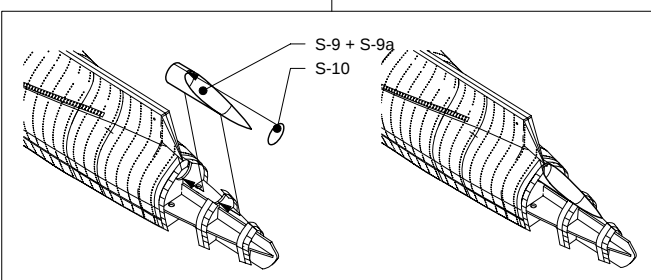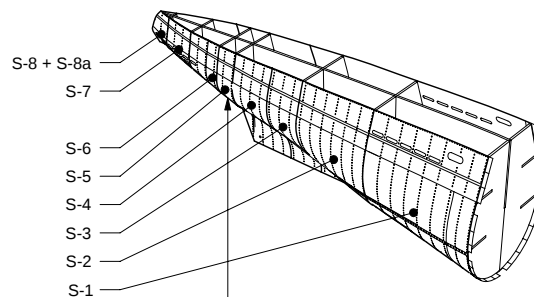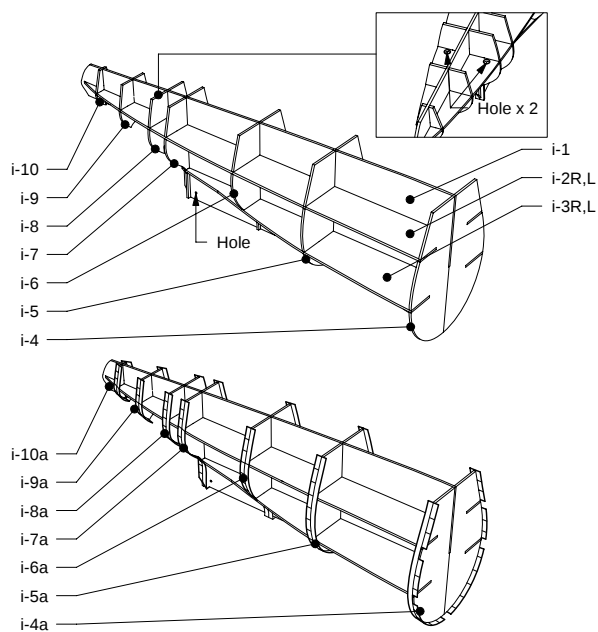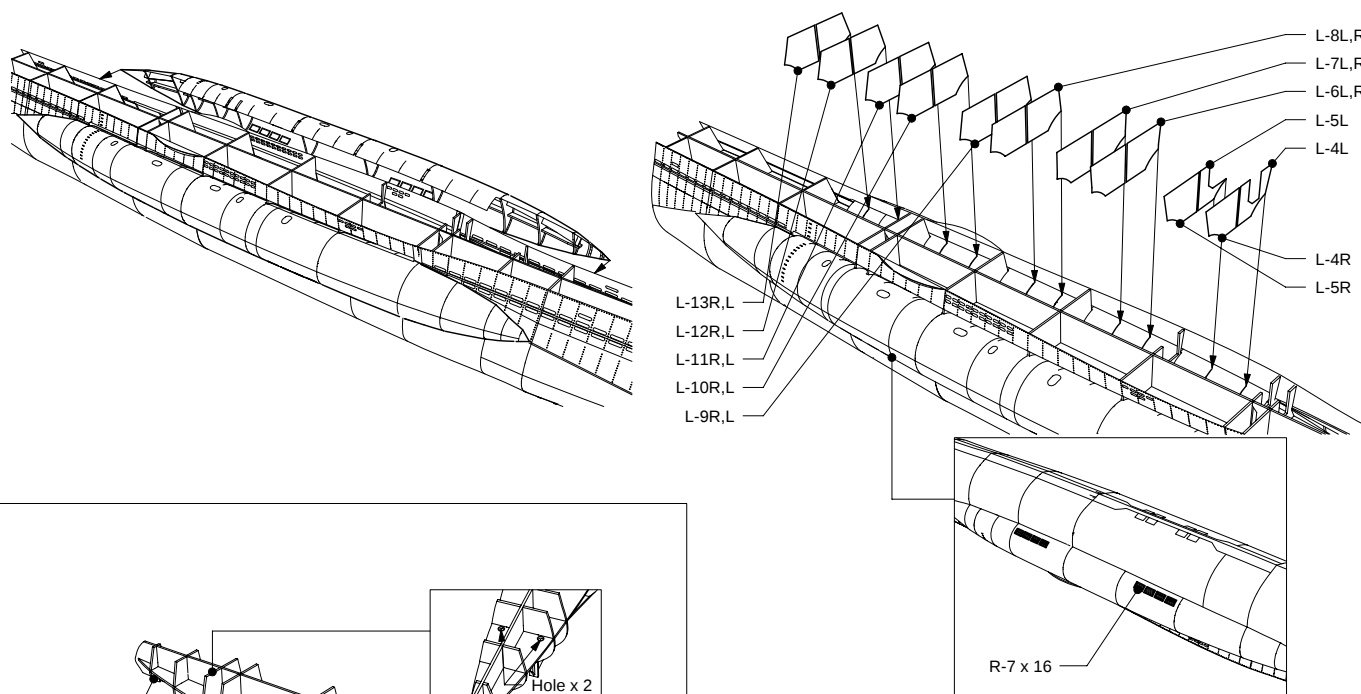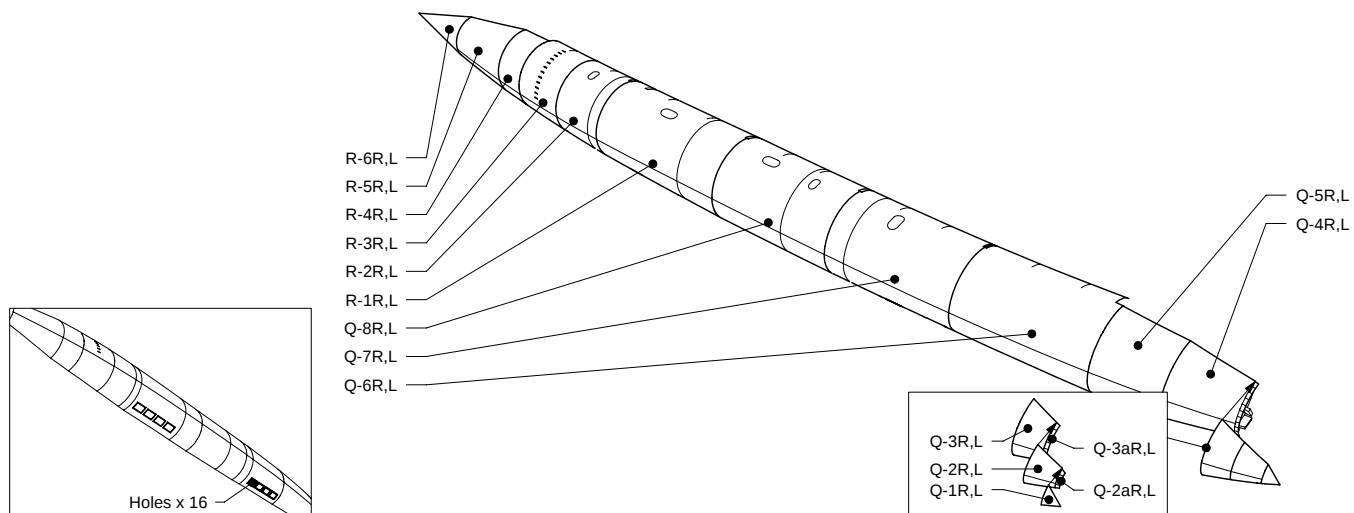

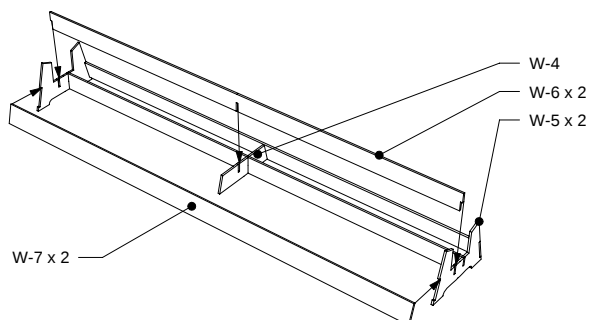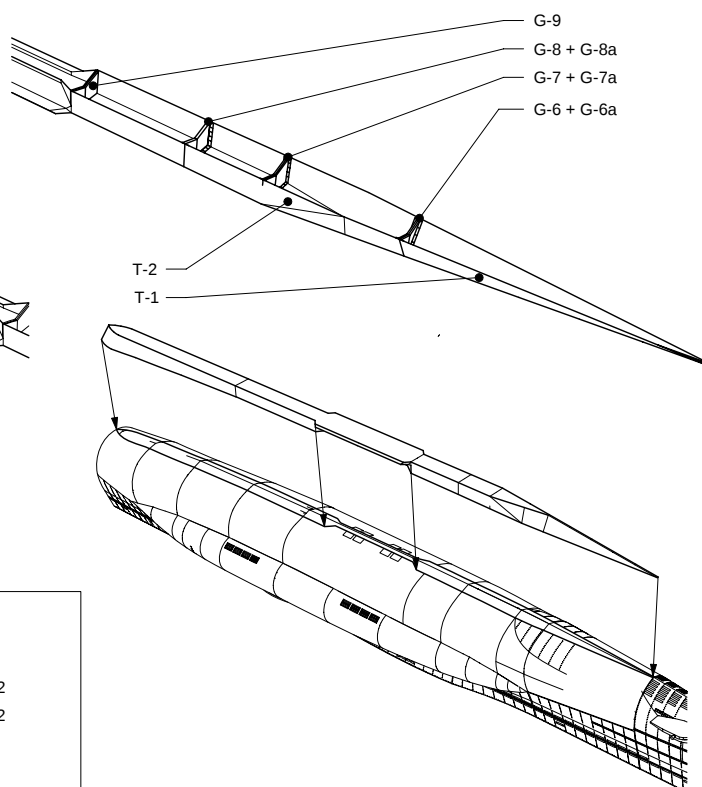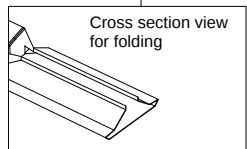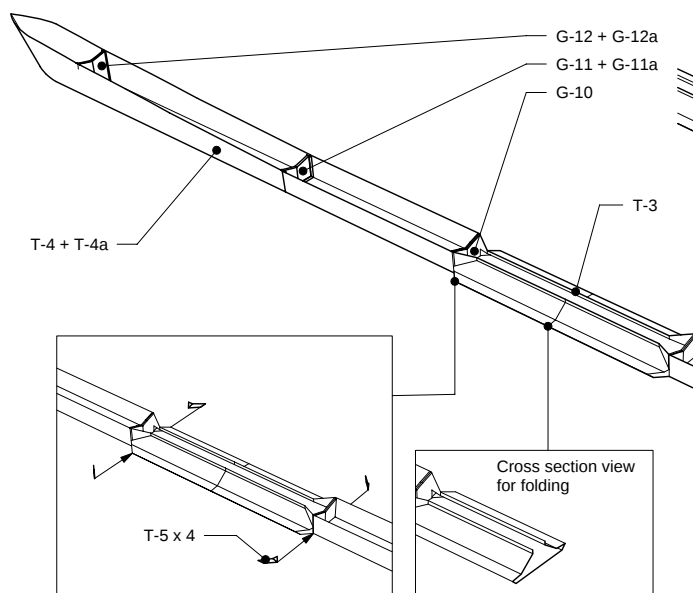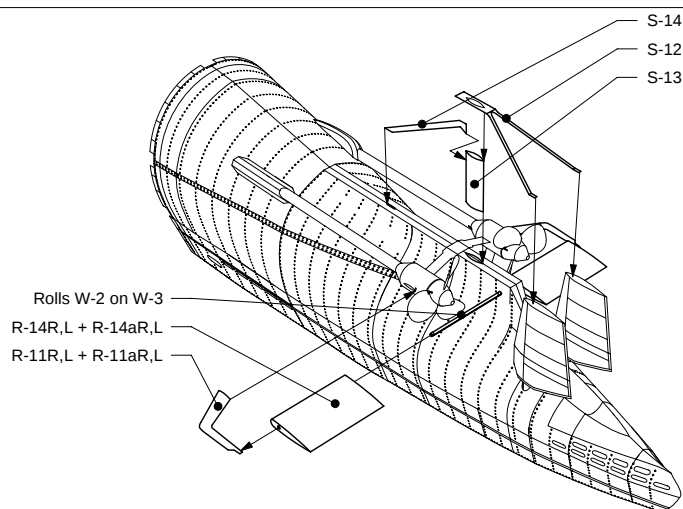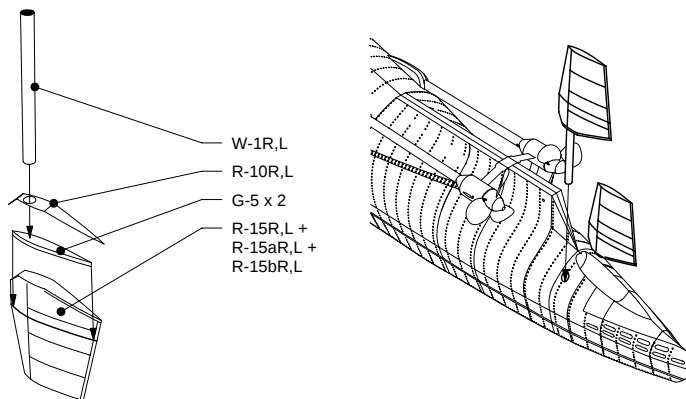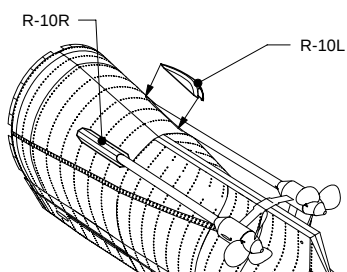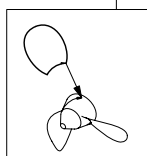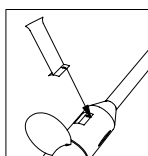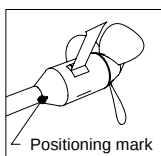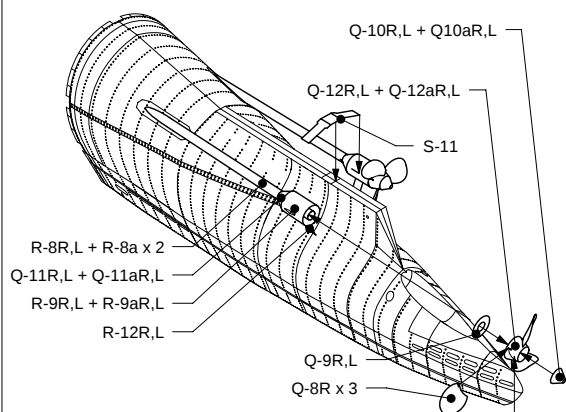


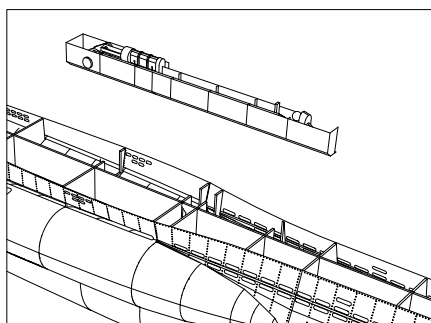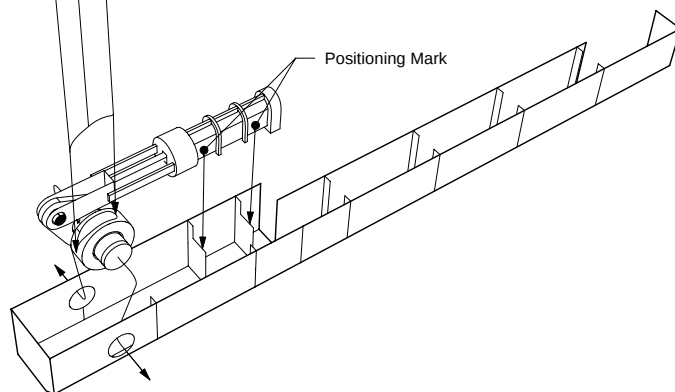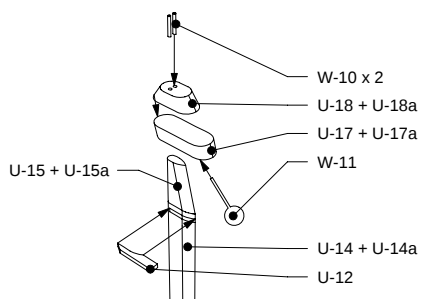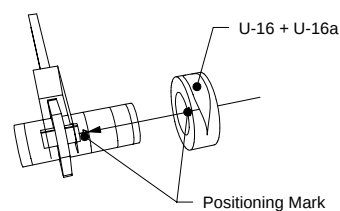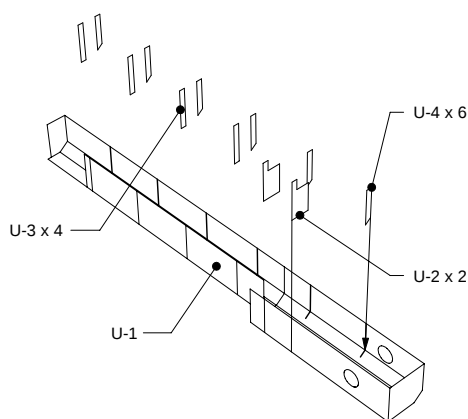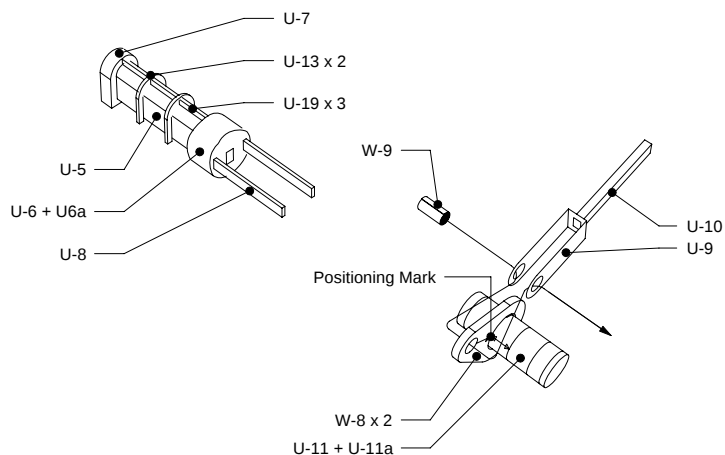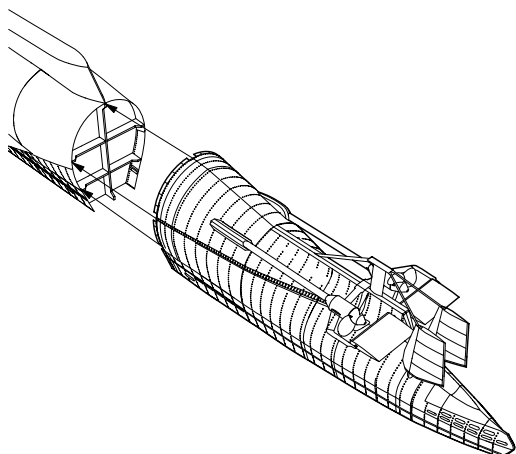






Check the fitment of snorkel in snorkel recess on frame in deck.

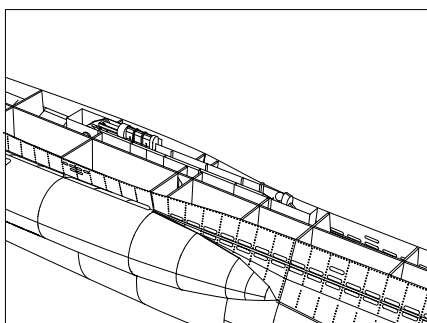



Do not glue into position, until correct alignment with conning tower is obtained (see assembly Part 12 , page 10)

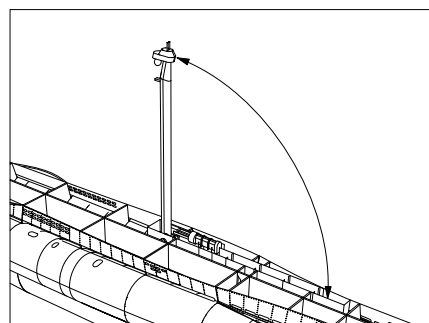


Check snorkel's movement.



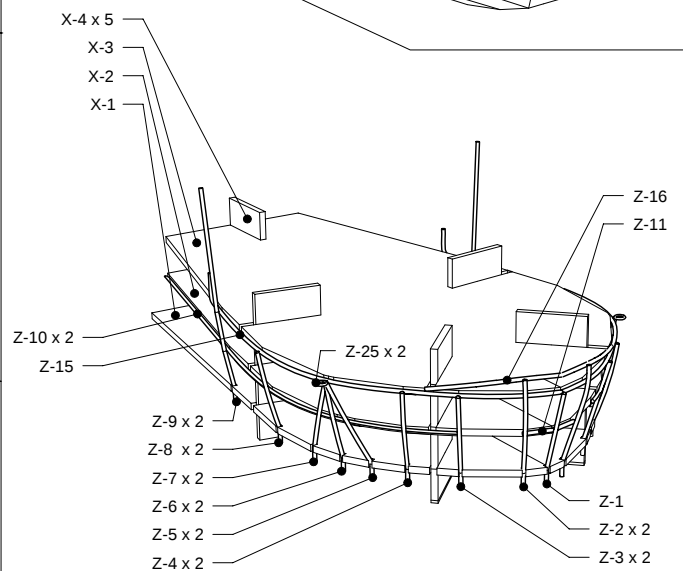
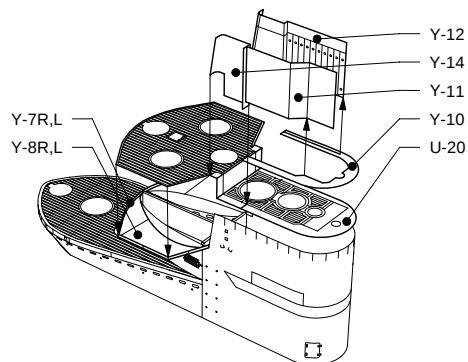
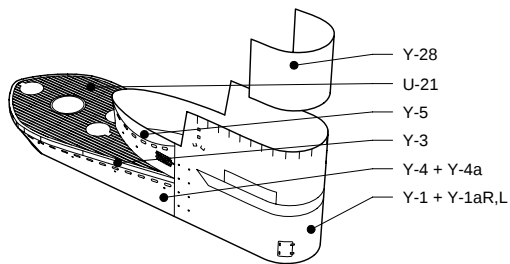
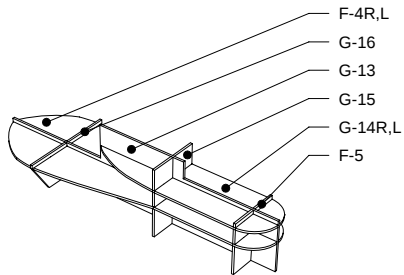
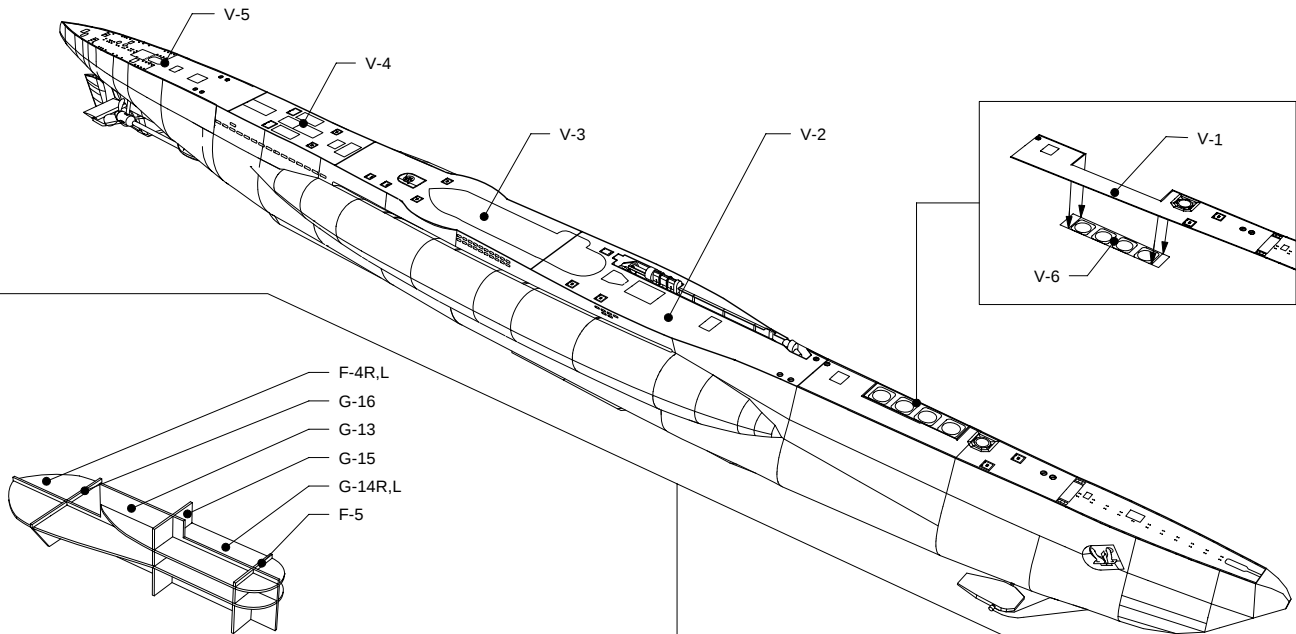




Remove jig carefully

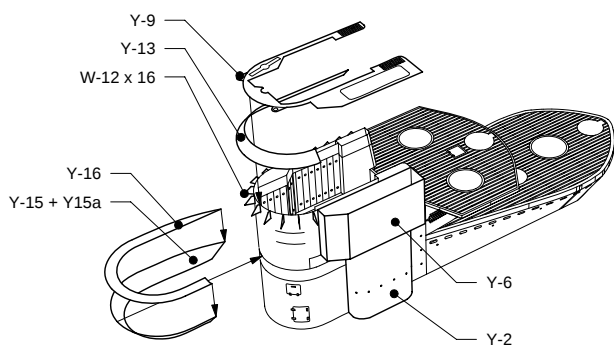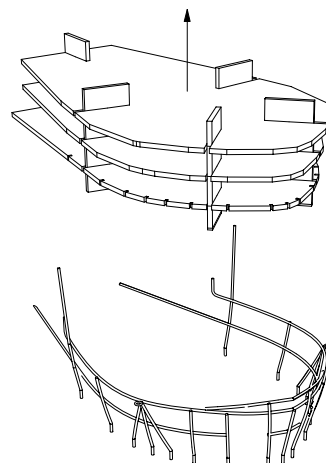

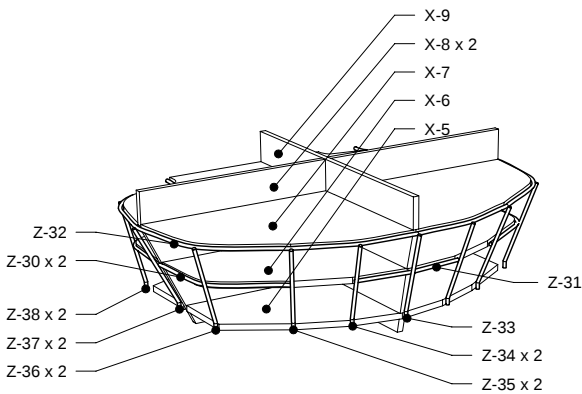


Remove jig carefully

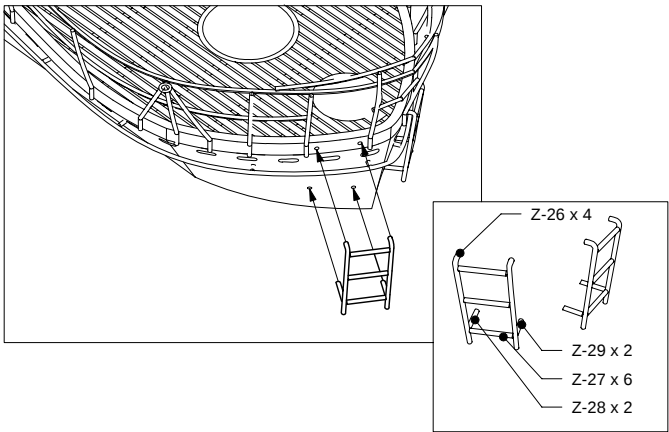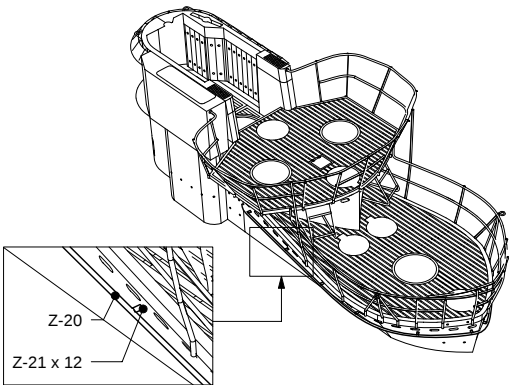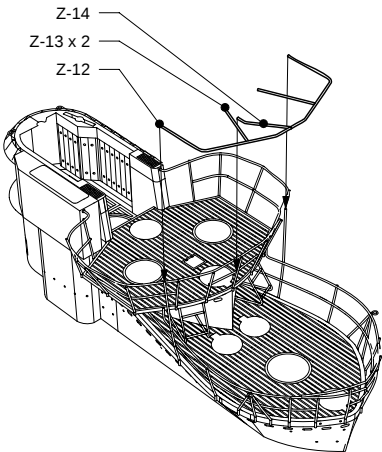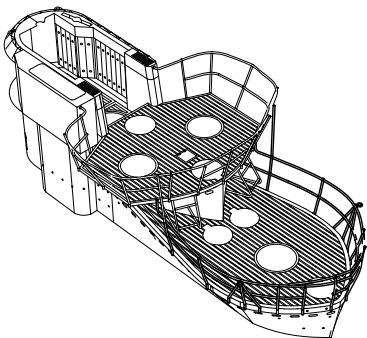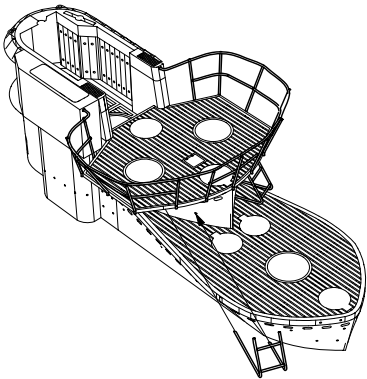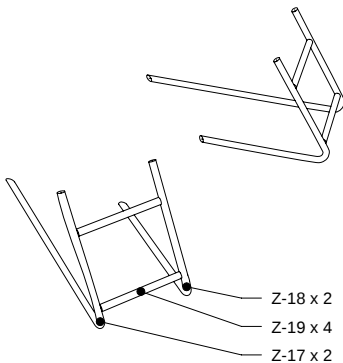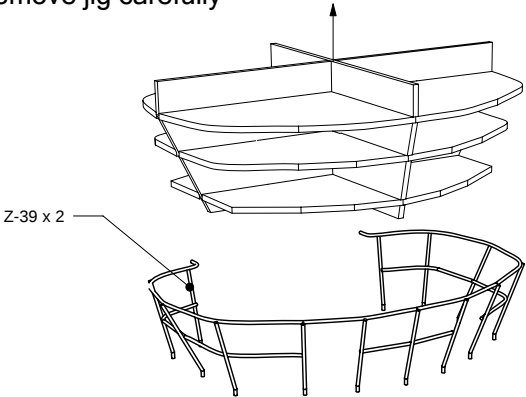


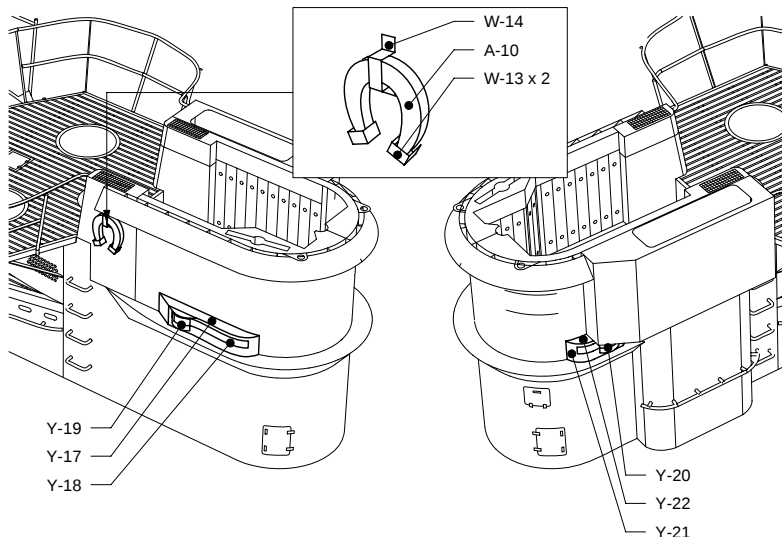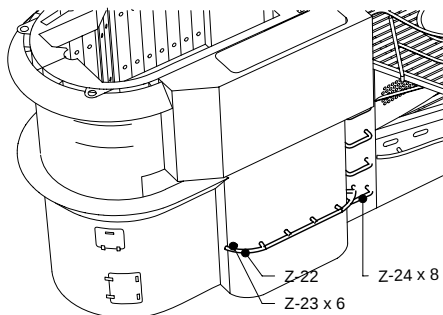


Sub-1

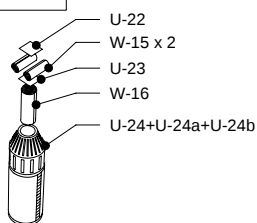


Sub-2

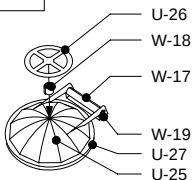



Sub-3

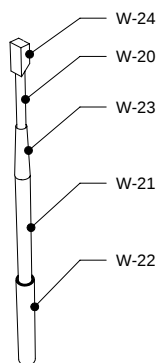



Sub-4

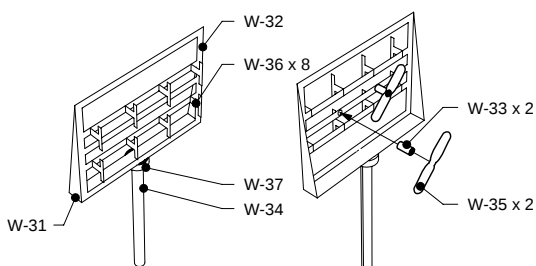



Sub-5





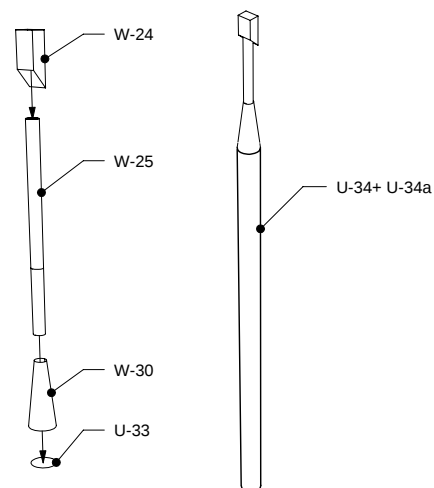
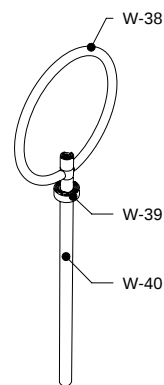


Sub-6


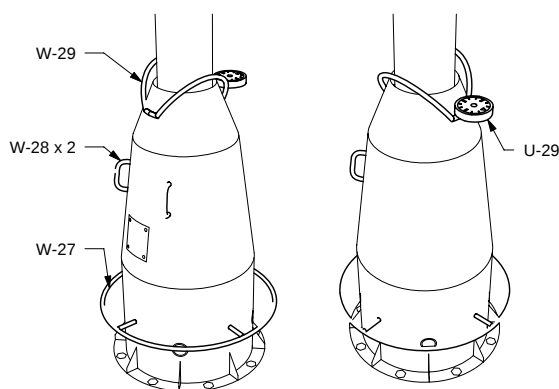



Sub-7

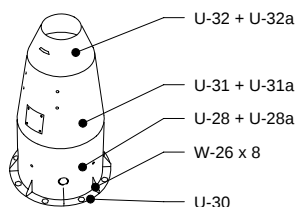
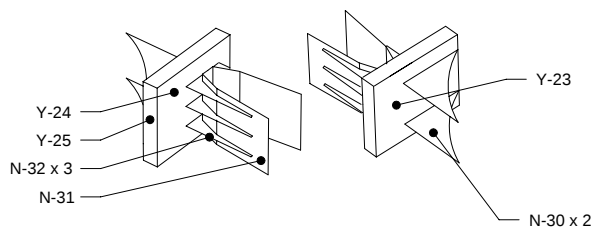


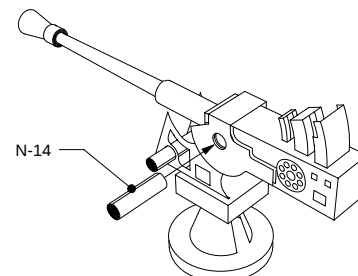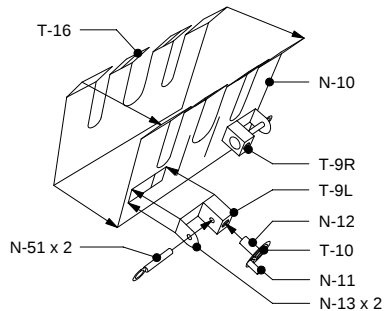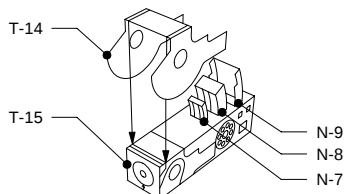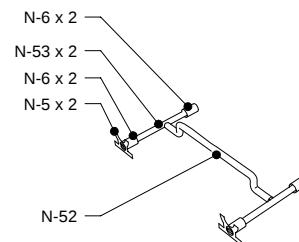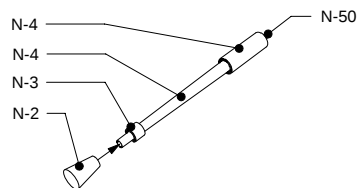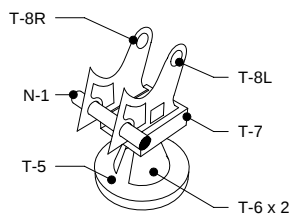


Sub-8

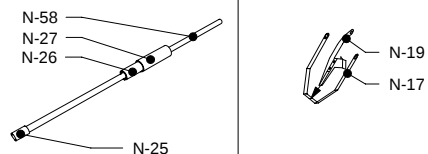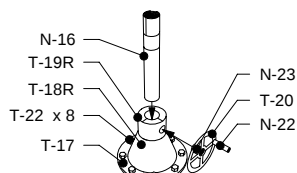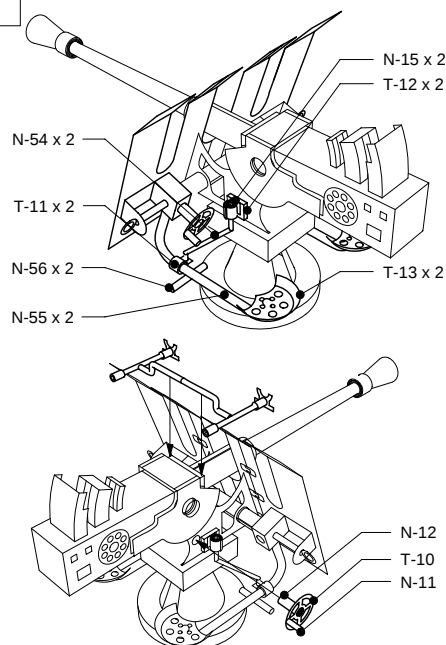



Sub-9

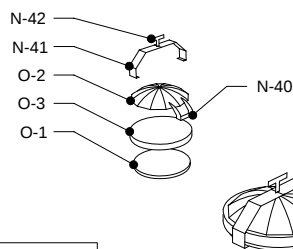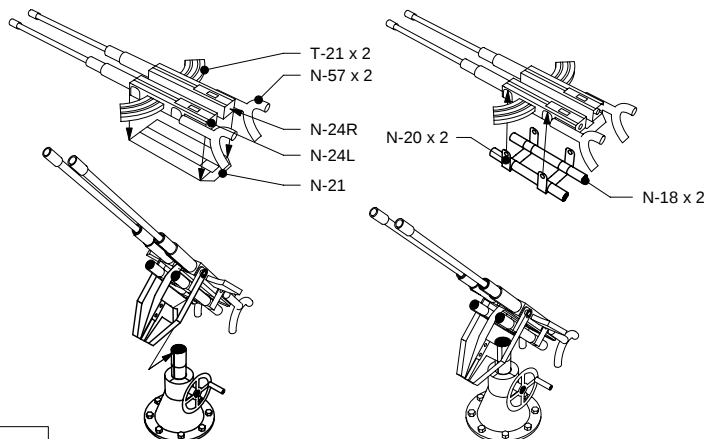





Sub-10

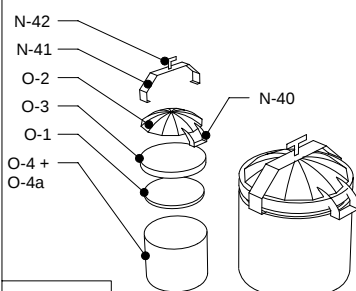

Sub-11

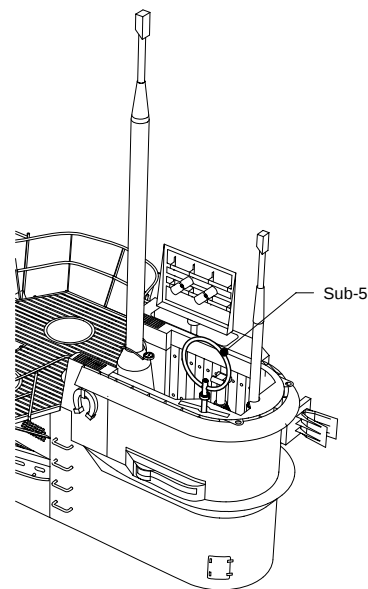
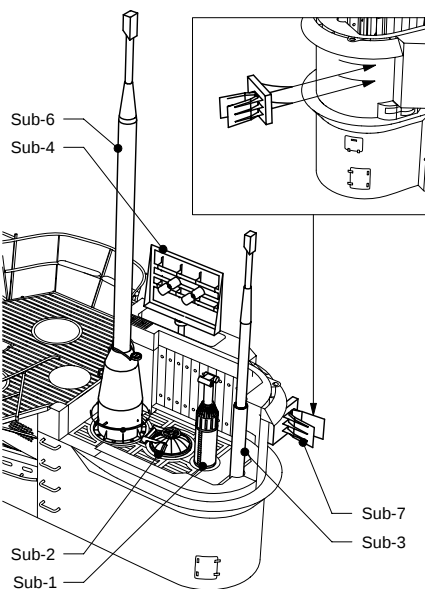


Sub-12



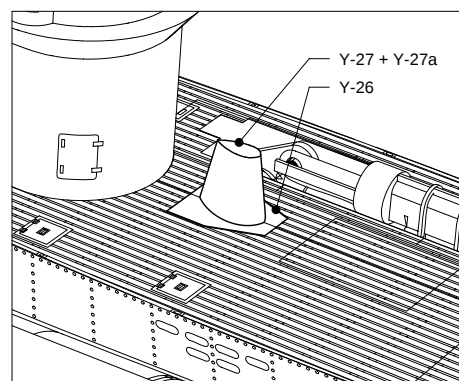
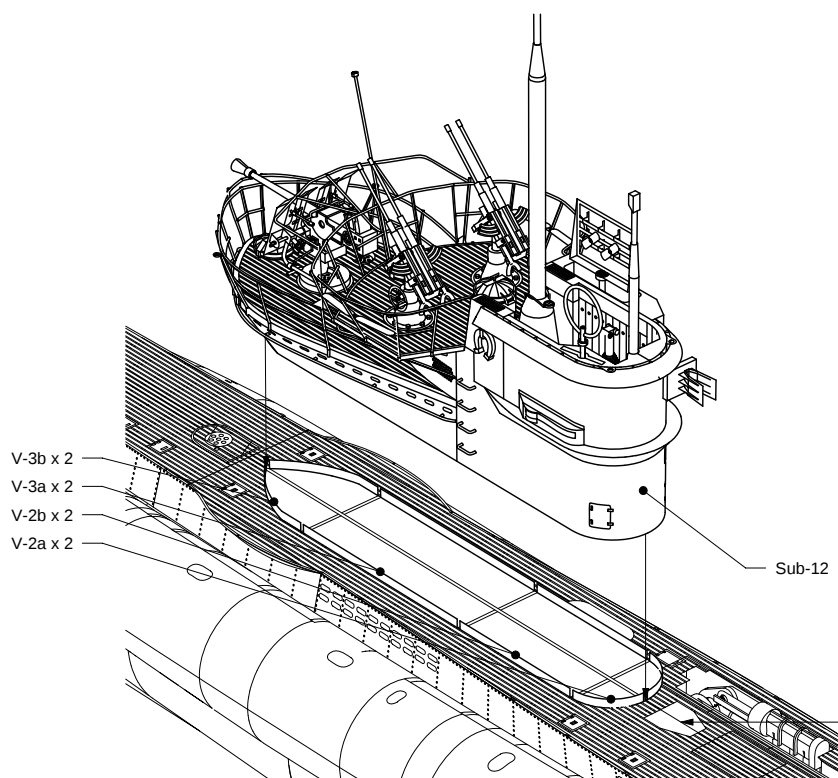
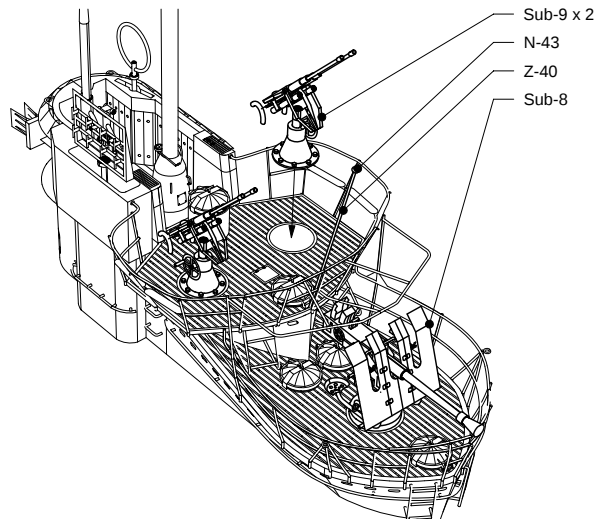
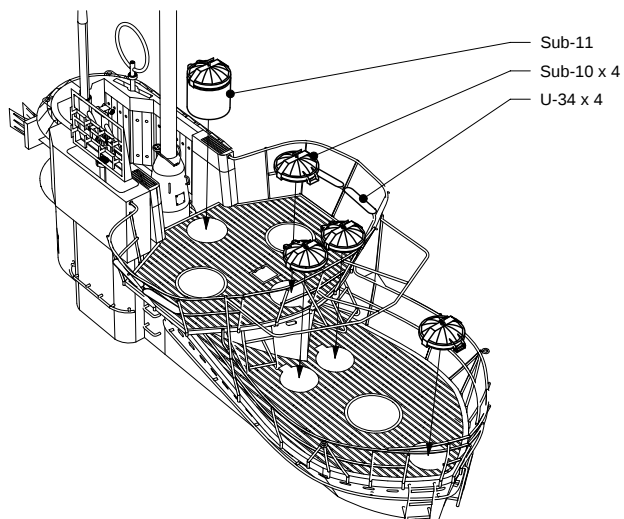



After placing the control tower then check lift up the snorkel for alignment checking. When snorkel lift up and fit to the snorkel receptor then fix snorkel slot to deck plate by glue.

Sub-13

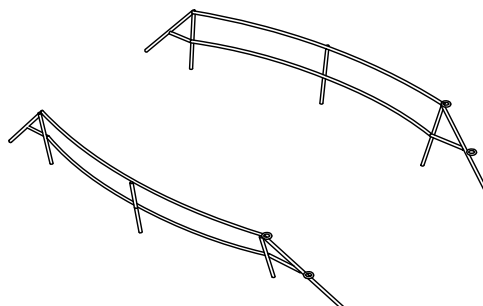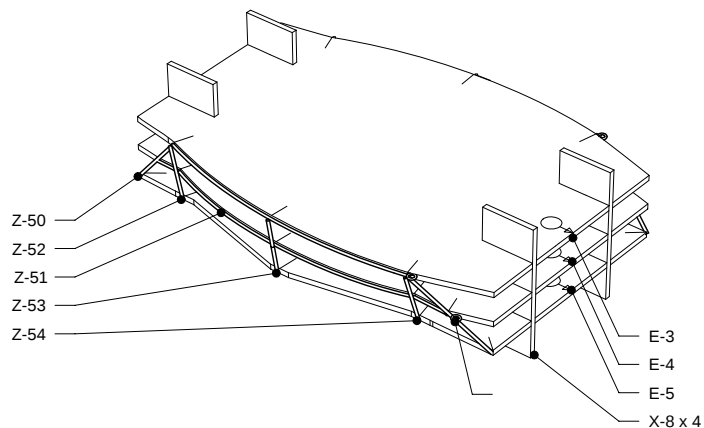

Sub-14

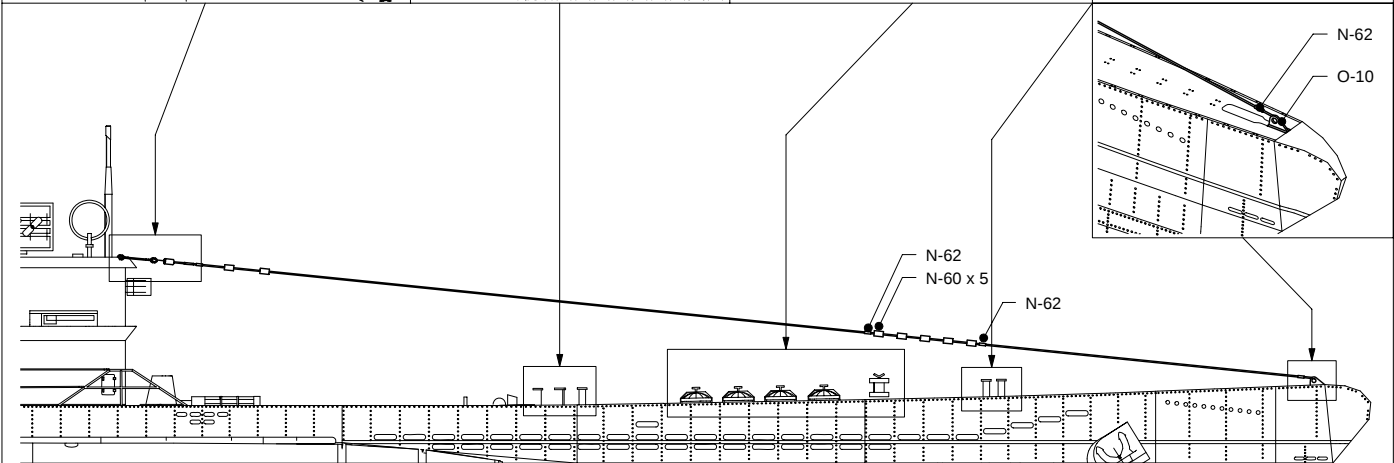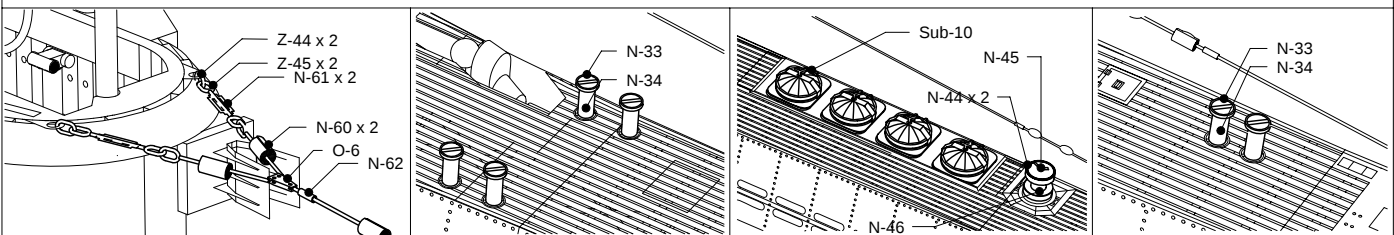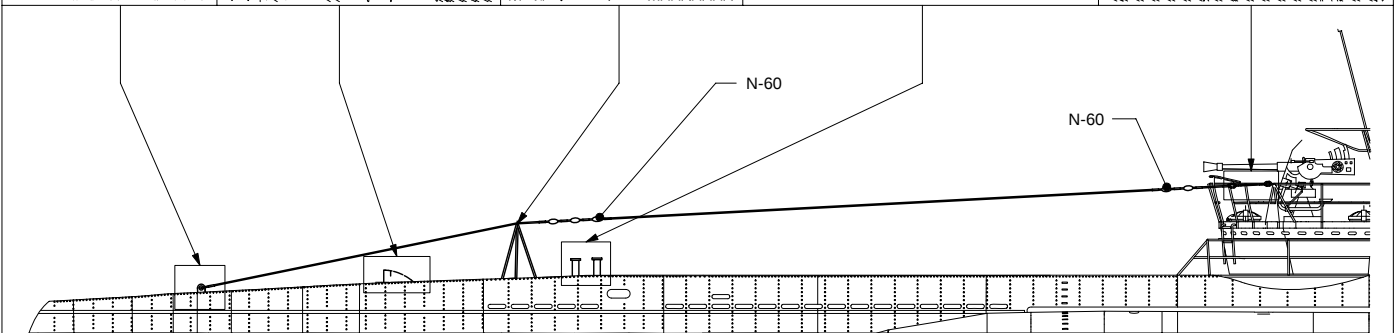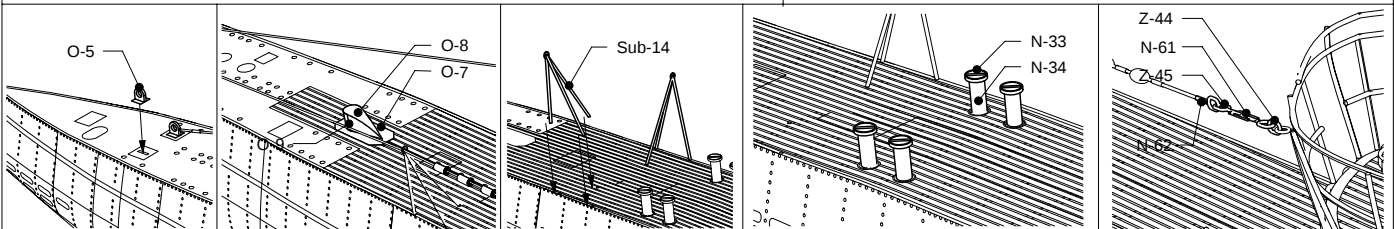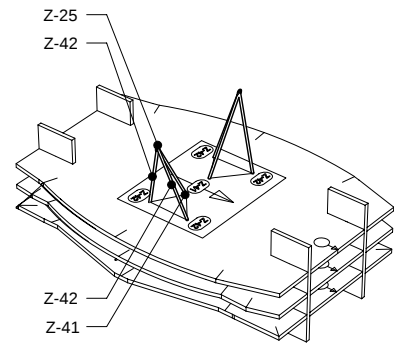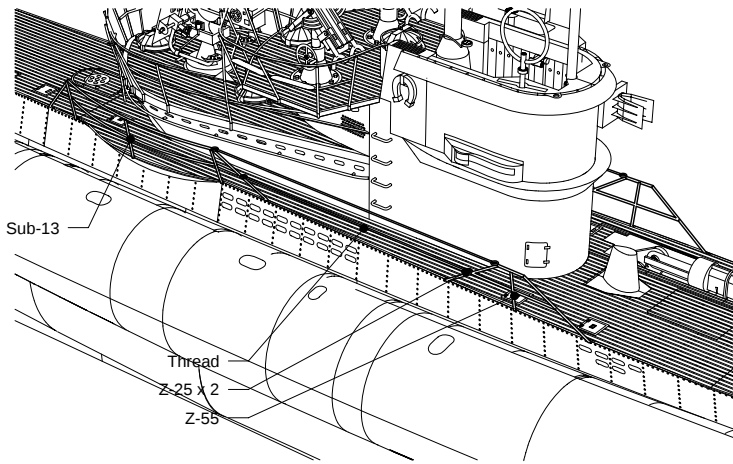


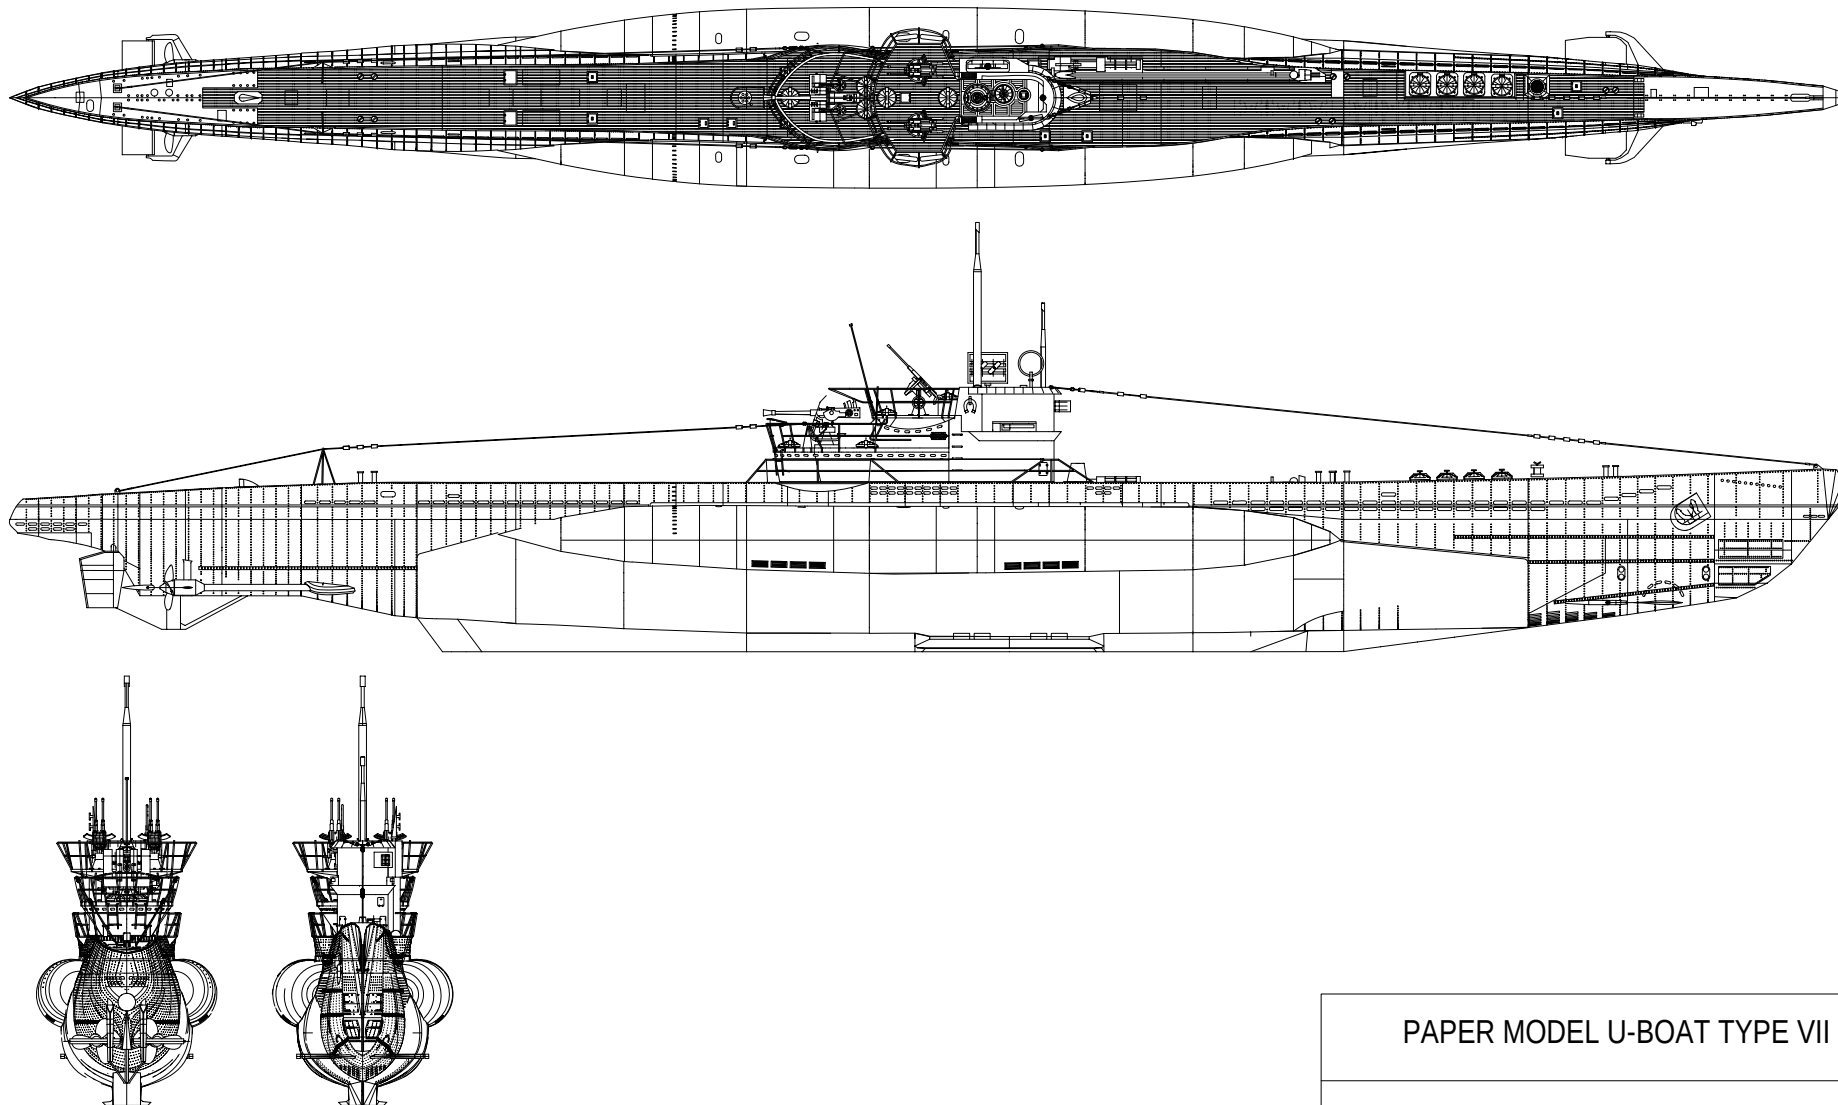

PAPER MODEL U-BOAT TYPE VII C

DRAWN : DUMRONGMONGKOLKUL PAWOOT (KOOKLIK)


RELEASED DATE: 01-FEB-08

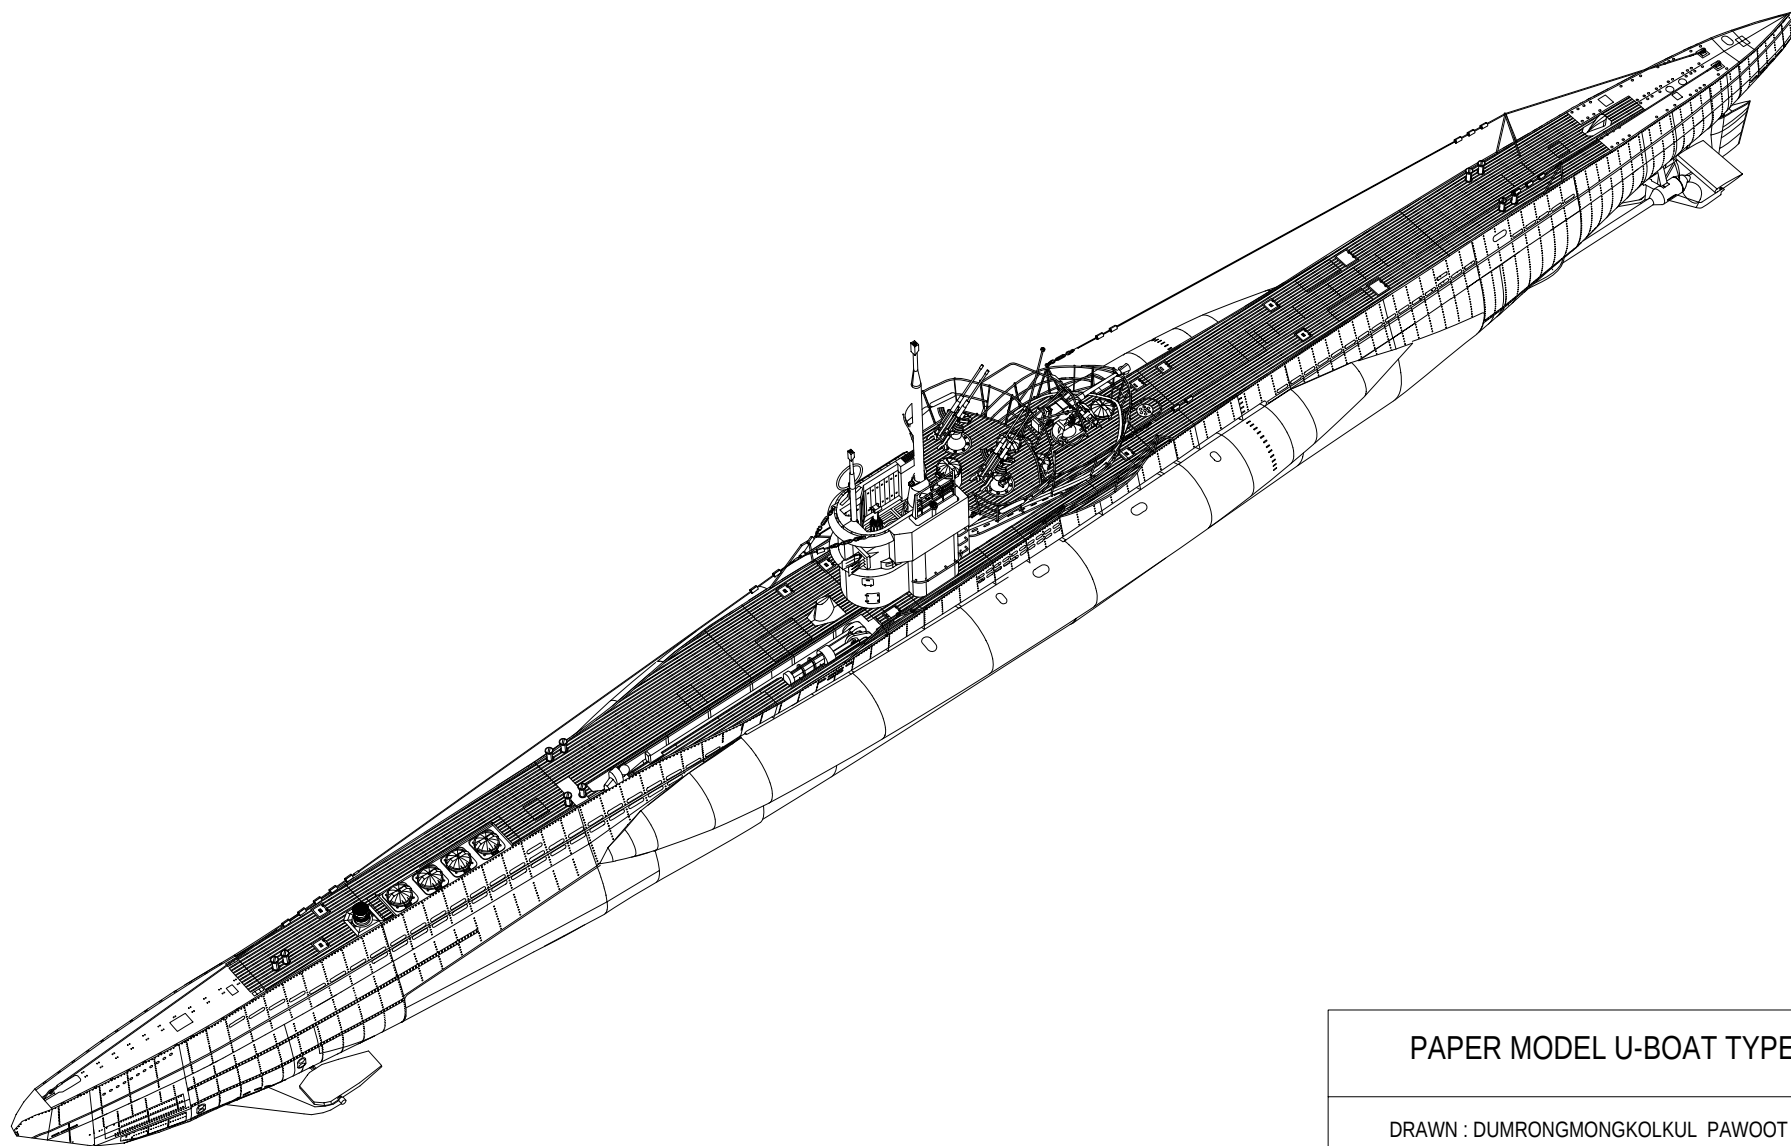

PAPER MODEL U-BOAT TYPE VII C

DRAWN : DUMRONGMONGKOLKUL PAWOOT (KOOKLIK)

RELEASED DATE: 01-FEB-08

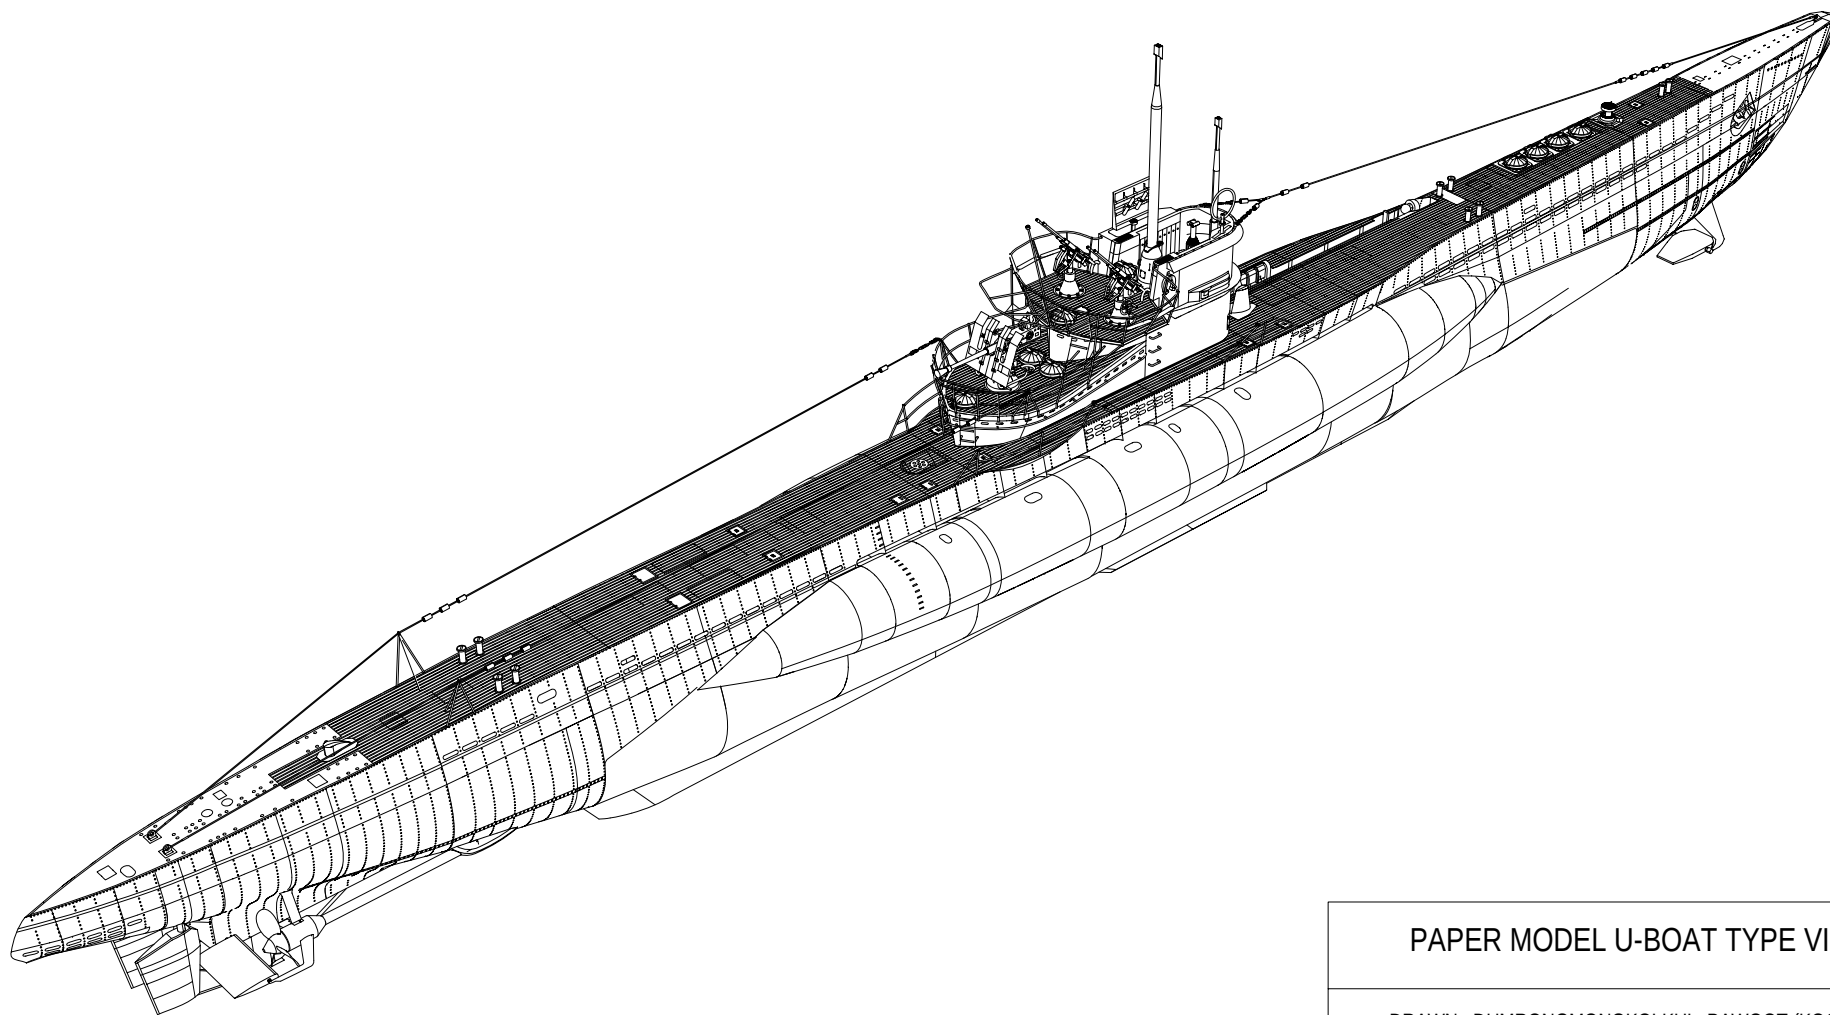

PAPER MODEL U-BOAT TYPE VII C

DRAWN : DUMRONGMONGKOLKUL PAWOOT (KOOKLIK)

RELEASED DATE: 01-FEB-08